

1 Product Introduction

WRISTBOOM Wearable Speaker.

This wearable wireless speaker is typically worn on the wrist and can also be strapped to many things. The **WRISTBOOM** is lightweight with hands-free phone function. It is ideal for sports, the outdoors or anywhere you would like to enjoy your music.

2 Using your WRISTBOOM

- For the first use, press the Power ON/OFF key for 4 seconds until you hear "Pairing", choose the Bluetooth Name from your bluetooth device and pair it, when you will hear "connected". Your **WRISTBOOM** is now connected successfully and you can enjoy music from your bluetooth device.
- For the second use if you press the Power ON/OFF key for 2 seconds, the **WRISTBOOM** will auto connect with the bluetooth device that was connected during previous use (make sure the bluetooth device is within effective distance and the bluetooth is working). If you press the Power ON/OFF key for 4 seconds until you hear "Pairing", it will erase the connected history, then you can connect it with a new bluetooth device.
- For the pause function, tap the power ON/OFF key to pause music.
- For the hands-free function, when calls come in, there will be a hint sound and you can tap the Power ON/OFF key to answer the phone.
- To turn off the **WRISTBOOM**, press the Power ON/OFF key for 4 seconds, the speaker will be turned off; if the speaker is powered on without any operation for 5 minutes, it will shut down automatically.
- The LED light is always working when music is playing.

3 Charging

Insert the DC2.0 USB cable into your computer or 5V USB adapter. When the red LED indicator is on, your **WRISTBOOM** is charging. When the battery is full, the red LED indicator will be off. When the battery is low, speaker quality is diminished.

4 Specifications

Bluetooth Version: 2.1+EDR

Working Voltage: 3.7V

Charging Voltage: 5V

Battery Capacity: 400 mah

Playing Time: 4-6 hours

Charging Time: 2 hours

Transmission distance: 10m

Speaker: 28mm 4 Ohm 2W

Size: 250mmx49mmx20mm

SNR: >=90dB

Sensitivity: 95d B+/-2d B

Frequency response: 20Hz-20KHz

5 Maintenance

Avoid corrosive liquids and gas, high temperature and water. Clean with a soft cloth and if stained, clean with damp cloth and dry before using.

6 Troubleshooting

PROBLEM

RED LED indicator is not on "when charging"

REASON

Check to see if USB is connected properly

SOLUTION

Check power supply

PROBLEM

BLUE light is not on

REASON

Battery shortage

SOLUTION

Please charge WRISTBOOM

PROBLEM

BLUE LED is on but no sound

REASON

Volume set low or WRISTBOOM not connected to device

SOLUTION

Check WRISTBOOM volume and make sure it is properly paired

PROBLEM

WRISTBOOM not connecting to device

REASON

Power not on or low, device's Bluetooth not on, device and WRISTBOOM are too far apart, WRISTBOOM or device already connected to another unit

SOLUTION

Check to make sure that other devices are not connected

7 Inside the Box

Bluetooth Wearable Speaker

DC2.0 Charging Cable

User Guide


BiGR Audio

P.O. Box 234128

Leucadia CA 92023-4128

service@bigraudio.com

BiGR

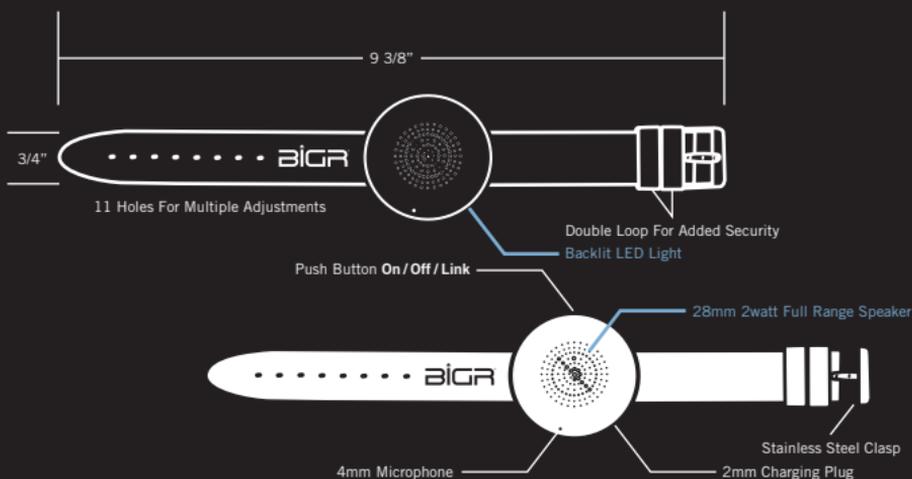

WRISTBOOM

WWW.BIGRAUDIO.COM